

OPERATING AND PROGRAMMING INSTRUCTIONS

Digital RFID Lock



FUNCTION	MODE		KEY SEQUENCE	NOTES			
	PUBLIC	PRIVATE					
MASTER CODE FUNCTIONS - FOR STEPS 1-3 PLEASE ENTER THE RELEVANT NUMBERS IN THE SEQUENCE SHOW BELOW (EG. STEP1STEP2STEP3)							
			STEP 1	STEP 2	STEP 3		
ADD MASTER CARD	✓	✓	[logo] [logo] [Old Master CARD] [press logo until]	★ ★ ★ ★ ★	[Old Master CARD] [New Master CARD] (hold new card for 5 seconds)		
DELETE SINGLE MASTER CARD (with card)			[logo][logo] [Master CARD] [press logo until]	★ ★ ★ ★ ★	[Scan Master card to delete] [Master CARD]		
DELETE SINGLE MASTER CARD (without card)			[logo][logo] [Master CARD] [press logo until]	★ ★ ★ ★ ★	[press logo until master light config is shown] [Master CARD]		
ADD USER CARD		✓	[logo][logo] [Master CARD] [press logo until]	★ ★ ★ ★ ★	[Master CARD] [New USER CARD]	Record light sequence after adding for user number	
DELETE ALL USER CARDS		✓	[logo][logo] [Master CARD] [press logo until]	★ ★ ★ ★ ★	[Master CARD] [press logo until] ★ ★ ★ ★ ★ [Master CARD]	DELETES ALL USER CODES	
DELETE USER CARD	✓		[Master CARD]			OPENS LOCK AND DELETES USER CODE	
DELETE SINGLE USER CARD(with card)		✓	[logo][logo] [Master CARD] [press logo until]	★ ★ ★ ★ ★	[Master CARD] [Scan USER card]	Deletes that user card	
DELETE SINGLE USER CARD (without card)		✓	[logo][logo] [Master CARD] [press logo until]	★ ★ ★ ★ ★	[Master CARD] [press logo until user light config is shown] [Master CARD]	Deletes the user in that location	
OPEN LOCK	✓	✓	[Master CARD]		[logo]	DELETES USER CARD IN PUBLIC MODE	
CLOSE LOCK		AUTO			[logo]	RE-LOCKS AUTOMATICALLY AFTER 4 SECONDS	
SET PUBLIC MODE		✓	[logo][logo] [Master CARD] [press logo until]	★ ★ ★ ★ ★	[Master CARD]		
SET PRIVATE MODE	✓		[logo][logo] [Master CARD] [press logo until]	★ ★ ★ ★ ★	[Master CARD]		
SET AUDIO ON	✓	✓	[logo][logo] [Master CARD] [press logo until]	★ ★ ★ ★ ★	[Master CARD]	Turns AUDIO ON	
SET AUDIO OFF	✓	✓	[logo][logo] [Master CARD] [press logo until]	★ ★ ★ ★ ★	[Master CARD]	Turns Audio OFF	
ECO MODE SET	✓	✓	[logo][logo] [Master CARD] [press logo until]	★ ★ ★ ★ ★	[Master CARD]	Default mode	
SLOW SCAN MODE SET	✓	✓	[logo][logo] [Master CARD] [press logo until]	★ ★ ★ ★ ★	[Master CARD]	SEE NOTES ON TIMERS BELOW.	
USER CODE FUNCTIONS - PLEASE ENTER THE RELEVANT NUMBERS IN THE SEQUENCE SHOW BELOW (EG. STEP1STEP2STEP3)							
OPEN LOCK	✓	✓	Scan USER card (Eco Mode requires logo button press before scan)				
CLOSE LOCK	✓		Scan USER card (Eco Mode requires logo button press before scan)				
CLOSE LOCK		AUTO				RE-LOCKS AUTOMATICALLY AFTER 4 SECONDS	
FUNCTIONS AVAILABLE TO ALL CODES							
BATTERY CHECK	✓	✓	[logo] [logo] [logo]			REPLACE BATTERIES IF RED LIGHT SHOWS	
NOTES			TIMER FUNCTIONS	TIMER INTERVALS	MODE DEFINITION	MODE	BATTERY CONDITION INDICATOR
ALL ACCEPTABLE BUTTON PRESSES ARE SIGNIFIED BY A GREEN LIGHT.			★ ★ ★ ★ ★	4 HOURS	ECO	BUTTON PRESS FIRST	FOUR GREEN LIGHTS - EXCELLENT
			★ ★ ★ ★ ★	8 HOURS	SCAN	2 Second Scan	THREE GREEN LIGHTS - VERY GOOD
INCOMPLETE FUNCTIONS "TIME-OUT" AFTER 4 SECONDS.			★ ★ ★ ★ ★	12 HOURS			TWO GREEN LIGHTS - GOOD
			★ ★ ★ ★ ★	16 HOURS			ONE GREEN LIGHT - LOW
ERRORS AND "TIME-OUTS" ARE SIGNIFIED BY FLASHING RED LIGHT.			★ ★ ★ ★ ★	20 HOURS			RED LIGHT -
			★ ★ ★ ★ ★	24 HOURS			CHANGE BATTERIES AS SOON AS POSSIBLE
FOLLOWING AN ERROR OR "TIME-OUT", UNIT REVERTS TO PREVIOUS SETTINGS.			★ ★ ★ ★ ★	36 HOURS			FLASHING RED LIGHT PRIOR TO LOCK OR UNLOCK INDICATES LOW BATTERY VOLTAGE CHANGE BATTERIES AS SOON AS POSSIBLE
			★ ★ ★ ★ ★	48 HOURS			
			ALL TIMES ARE APPROXIMATE +/- 10%				
ENSURE THAT YOU KEEP A SAFE RECORD OF YOUR USER CARDS. ENSURE YOU KEEP THE MASTER CARD SAFE WITHOUT IT YOU CAN'T CHANGE ADD OR DELETE USERS							