

## USER INSTRUCTIONS

### **3950** **Horizon** **4 DIGIT CODES**

For full fitting, operating and  
programming instructions please visit  
[www.lowe-and-fletcher.co.uk](http://www.lowe-and-fletcher.co.uk)

Lowe & Fletcher Ltd  
Moorcroft Drive  
Wednesbury, West Midlands  
WS10 7DE, England

T: + 44 (0) 121 505 0400

F: + 44 (0) 121 505 0420

E: [sales@lowe-and-fletcher.co.uk](mailto:sales@lowe-and-fletcher.co.uk)

W: [www.lowe-and-fletcher.co.uk](http://www.lowe-and-fletcher.co.uk)

## Public Mode

### Lock

ENTER USER CODE  
(4 DIGITS)



CONFIRM CODE  
(4 DIGITS)



PUSH IN HANDLE  
TO LOCK



ERROR  
TRY AGAIN

## Error



Errors will time-out after 4 seconds.  
Unfinished instructions will time-out after 4  
seconds. Always wait for LED lights to finish  
before pressing next key.

## Private Mode

### Unlock


USER OR  
MASTER CODE



HANDLE  
POPS-OUT  
TURN HANDLE  
TO OPEN



PUSH IN HANDLE  
TO LOCK

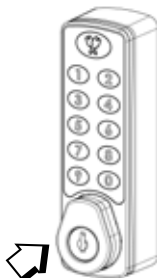

### Change User Code

LOGO



OLD USER CODE



02



ENTER  
NEW USER CODE  
(4 DIGITS)




CONFIRM  
NEW USER CODE  
(4 DIGITS)



PUSH IN HANDLE  
TO LOCK

## Emergency Key Override

INSERT MASTER KEY OVERRIDE & TURN 90°  
EITHER CLOCKWISE OR ANTI-CLOCKWISE

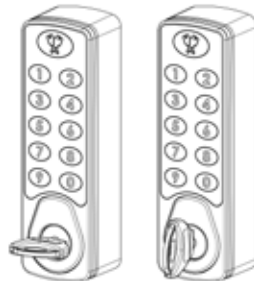

TURN KEY BACK 90° TO ORIGINAL  
POSITION & REMOVE FROM LOCK