

# Public Mode

---

## To Lock

PRESS



BUTTON



APPLY CARD



TURN HANDLE  
TO CLOSE

## To Unlock

PRESS



BUTTON



APPLY CARD



TURN HANDLE  
TO OPEN



---

## Error



Errors will time-out after 4 seconds.  
Unfinished instructions will time-out after 4 seconds.  
Always wait for LED lights to finish before pressing next key.