

## Battery Replacement

### **Digital Combination Locks 3780/2/4 Only**

For full fitting, operating and  
programming instructions please visit  
[www.lowe-and-fletcher.co.uk](http://www.lowe-and-fletcher.co.uk)

Lowe & Fletcher Ltd  
Moorcroft Drive  
Wednesbury, West Midlands  
WS10 7DE, England

**T:** + 44 (0) 121 505 0400

**F:** + 44 (0) 121 505 0420

**E:** [sales@lowe-and-fletcher.co.uk](mailto:sales@lowe-and-fletcher.co.uk)


**W:** [www.lowe-and-fletcher.co.uk](http://www.lowe-and-fletcher.co.uk)

# 378- Battery Replacement

To check if the batteries require replacement press LOGO button twice (three times with RFID versions).

Batteries require changing if RED light flashes.

If the RED light flashes immediately prior to unlocking, the batteries must be changed as soon as possible.

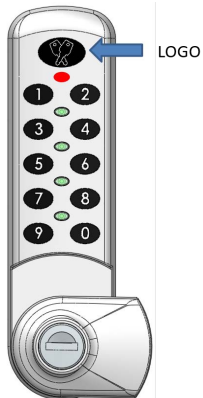

## Instructions - Dry Area Locks Only

1. Enter USER code or Over-ride key to gain access to the rear of the door.
2. Remove two fixing screws.
3. Rotate lock as shown.
4. Replace Batteries.
5. Re-fit fixing screws

